

EMPORIA EMERGENCY CALL FUNCTION

You can save up to five emergency numbers (family members, friends and official institutions).

- In an emergency press and hold the emergency button on the back of the phone. (This works even when the keypad is locked.)
- The five preset numbers will be dialled automatically in the order you have saved them.
If it is not possible to get through to anyone on the first number, the second number will automatically be dialled.
If it is not possible to get through to anyone on the second number, the third number will automatically be dialled, and so on. (The phone will go through a list of five numbers a maximum of three times.)
- At the same time as each emergency call, a text message (SMS) will be sent to the contact, saying: »**You are about to receive an emergency call. An audible warning signal will sound when you answer the call. Please press the 0 key three times to establish the connection.**«

Note: The contact must press the 0 key within 60 seconds, or the call will be disconnected (to prevent your emergency call going through to a contact's mailbox).

- From the moment you make an emergency call, your emporia phone will automatically answer any incoming calls for one hour. To stop this function, press and hold [] for 3 sec. or turn your device off completely using [] and then turn it on again.
- To cancel the emergency call, press and hold [].
- During the emergency call, a warning tone will sound continuously, to alert anyone nearby and the person being called.
- If you do not have any emergency numbers saved, have no credit on your prepaid phone card or are connected to a foreign network without permission (e.g. roaming is not activated), 112 will be dialled when you press the emergency button.

Note: If you want to add the number of an official institution such as the police or fire brigade as an emergency number, you must check that this is okay with the respective institution beforehand. We do not assume liability for any costs incurred through you calling such an institution by mistake.

Adding/editing emergency numbers:

- In the **Settings** menu ⇒ **Emergency numbers**
⇒ **Add emergency number**
⇒ Select an entry (e.g. **EmNo. 1**) by pressing [] [].
⇒ Select **OK** by pressing [].
⇒ Select **Private** or **Help organisation** [].
⇒ Select a contact

Activating the emergency button:

- In the **Settings** menu ⇒ **Emergency button** ⇒ **On/Off**

Pre alarm:

The pre alarm is a warning tone that sounds for ten seconds and alerts anyone nearby to the emergency. After this, the emergency call sequence starts.
In the **Settings** menu ⇒ **Emergency numbers**
⇒ **Pre alarm** ⇒ **On/Off**

SETTINGS

In the **Settings** menu ⇒

Sound & alerts:

- You can personalise the settings for tones, signals and vibration or select a set of predefined settings (profile).
- Menu items: **Ringtone, Alarm melody, Ringer volume, Silent/Sleep mode, Increasing ring, Vibra for call, Vibra for alarm, Key tones, Message tone, Vibra for messages, Handset volume, Handsfree volume, Confirmation tone, Emergency tone**
 - **Silent/Sleep mode** profile
Visual notifications only (torch LED flashes, notifications on the display), no ringtone, no vibration function

Voicemail number:

Enter the number for your mailbox. You will find this number in the documents supplied by your network provider.

Security settings:

- **PIN:** PIN request on/off, change PIN
- **Phone code:** on/off, change (factory preset code: 1234)

Master reset:

You can restore all the factory settings on your phone (factory preset code: 1234).

CHARGING UNIT

Charging the phone using the charging unit:

Plug the charging cable into the port on the back of the charging unit, and slot the phone into the charging unit.

CAMERA AND PHOTO ALBUM

Your phone has a camera. You will find photos you have taken in the menu under **Photo album**.

Taking a photo:

- In standby mode, enable the camera by pressing [].
⇒ Press [] to take a photo.

Camera options:

- If the camera is active press [] or in the **Settings** menu ⇒ **Camera settings**
⇒ **Self timer, Size, Memory** (switching between device or memory card as a location for photos).

Photo album:

- Your photos will be saved in the **Photo album** menu.
- [] and/or [] let you flick through the photo album.
 - Pressing [] opens **Options** for the selected picture.
Available options: **View, Send, Wallpaper, Rename, Delete, Delete all**

Note: You can connect your phone to a PC using the USB data cable and transfer your photos.

Note: Using a micro SD card will increase the storage capacity of your phone. You can purchase these cards from electronics stores.

TOOLS

In the **Tools** menu ⇒

Alarm clock:

- **Set time:** Enter the time and confirm. The alarm clock will now go off at the time you have set every day.
 - **Off:** Disable alarm clock
- Switch off the ringing alarm clock by pressing [].
Mute the alarm by pressing [] or []
(it will ring again after five minutes).

Birthday reminder:

- Entering a birthday: **New birthday**
⇒ Select **From contacts** or **Enter Name**
⇒ Under **Set date**, enter the birthday date and
⇒ under **Reminder time**, enter the time of day for the alarm

Bluetooth:

- This function allows you to use Bluetooth-enabled handsfree kits wirelessly.
- **Bluetooth on/off:**
Enable/disable Bluetooth
 - **Connect** ⇒ **Search for new devices:**
Search for devices you want to connect
⇒ Select devices by pressing [].
The next time you enable Bluetooth, devices that have been connected before will be recognised and connected automatically.

System update:

You can download the latest software for the phone yourself and therefore update the system and improve applications yourself.

Attention: Run the update only when you have a mobile-data-tariff!

- ⇒ Open menu ⇒ **Tools** ⇒ **System update** ⇒ **Check** for updates;
A message will appear telling you whether or not there is any new software available. If there is, select **Download** to start the update process.
⇒ Once the download has been completed, select **Update now**.
You will be informed that you cannot use the phone during the update process.

Attention: Do not press the on/off button during the update process and do not start using your phone again until this message has appeared: **The installation was successful.**

FREQUENTLY ASKED QUESTIONS

The display screen is just blank/black:

- Energy-saving is activated:
Press [], [] or [] key.
- The keypad is locked and energy-saving mode is activated:
Press [] or the green button.
- The phone is switched off:
Press [] for two seconds to turn it on.
- The battery is completely empty, the phone has switched itself off: Charge the battery.

ENGLISH



emporia**ACTIVE**

For information on simply making and receiving calls,
go to www.emporia.eu

PartNo: V50-4G_ShortManual-V2_54354-ENG | 202002 | Subject to mistakes, printing errors and technical changes.

INSERTING A SIM CARD

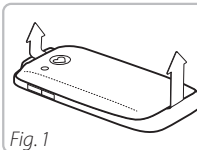 


Fig. 1: Remove the battery cover.

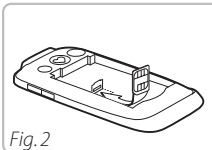 


Fig. 2: Unlock and fold up the SIM card holder, insert the SIM card with the gold contacts facing down and lock the holder.

INSERTING AND CHARGING THE BATTERY

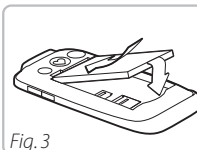 


Fig. 3: Insert the battery, making sure that the battery contacts touch the phone's gold contacts.

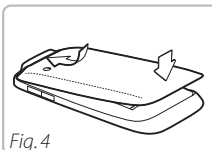 


Fig. 4: Put the battery cover on the phone and press it down.

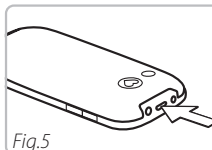 




Fig. 5: Plug the charging cable into the USB port on the top of the phone.

Attention: Charge the battery for at least four hours before using it the first time. Only use batteries and chargers that are permitted for use with this specific model.



GETTING STARTED

- Pressing the  key for at least 3 seconds switches the phone on.
- To turn the phone off, press the  key for 3 seconds again.




When using a new SIM card for the first time:

Enter the four-digit PIN code (personal identification number)
⇒ Press to confirm the code.


Note: The PIN code is a four-digit number that is intended to prevent somebody else from being able to switch on your mobile phone. You have a maximum of three attempts to enter the correct number. If you enter the wrong number three times in a row, you will only be able to unblock the SIM card with the PUK code. You will find the PIN code and PUK code in the documents supplied by your network operator.

⇒ Select a **Language** by pressing and ⇒





Incoming call:


- To answer: Accept the call by pressing .
- To reject: Press .
- To mute the ringtone temporarily:
Press the  button (on the side of the phone).

To end a call: Press .

Dialling: Enter the number (incl. area code) you want to dial using the keypad ⇒ Start the call by pressing .

Redialling:






Press  to bring up the **call info.**
 ⇒ Press  and  to select a number.
 ⇒ Start the call by pressing .

Hands-free: Press  during a call to open the **Options** and turn the hands-free function on or off.




Standby mode:


In standby mode the phone is on, but is not running any applications (calls, SMS messages, etc.).

Accessing the menu:

- Press  to open the menu.
- Scrolling with  and/or  through the menu items:
Messages, Photo album, Tools, Contacts, Call info, or Settings
- Press  to select the option shown on the screen (above the keys).
- To return to standby mode, press  several times.

Saving energy:

If a few seconds pass without the phone receiving any input from you, the screen will go blank to save energy. In the event of an incoming call or you pressing   or  key, the screen will automatically light up again.

If the keypad is set to lock automatically, the phone will only respond if the green button or the  key is pressed.

CONTACTS

Always save names and numbers with the international dialling code, e.g. +44 for the United Kingdom, +1 for the United States and +61 for Australia).



Press to open the menu.

⇒ Go to **Contacts** by pressing . ⇒ 


⇒ Menu items:

***Search name, Add contact, Edit contact, Delete,
Send contact via SMS, Copy contact, My number,
Speed dial keys, Emergency numbers, Phone book settings.***


Adding a contact (name and number):

Open the menu with . ⇒ Press  to go to **Contact**.



⇒ Go to **Add contact** by pressing . ⇒

⇒ Enter a name (see the section **Writing a message** for text input information). ⇒  ⇒ Insert the number

Searching for contacts:

Press  to open **Contacts** ➔

- Press  and  to flick through the entries
- or **Search name** ⇒ 

⇒ enter the first few letters of the entry you're looking for using the keypad (and continue flicking with  if necessary). ⇒ Once you've selected an entry, press  to start a call.

SMS MESSAGES

SMS (Short Message Service) messages are short written messages.

Writing a message:

Open the menu by pressing . ⇒ **Messages** ⇒ 
⇒ **Write message** ⇒ . Enter text using the keypad.

- Each key has several characters assigned to it, which can be selected by pressing the respective key several times. (E.g. 2x ⁴ghi, 1x ²abc, 3x ⁵jkl, 3x ⁵jkl and 3x ⁶mno for **Hallo**)

1 qd	.,!?'":@:1	7 pqrs7B\$
2 abc	abc2äæåà	8 tuv8üùú
3 def	def3èèè	9 wxyz9ýþ
4 ghi	ghi4iíí	0 Blank space; 0
5 jkl	jkl5£	*+ Special characters: .,?!'()'@ \/: ; + - * = % & < > ...
6 mno	mno6öøó	

- Press  to change the input method:

abc: Lower case only


ABC: Upper case only

- Delete all: press and hold

Sending an SMS:

Select **Send to** by pressing  twice and then insert a number, or press  to search in **Contacts** before pressing  again to send.

Receiving a message:

A short beep and a message on the display informs you of new messages. Pressing  allows you to read the message immediately or view it in your received message list via the **Messages** menu ⇒ **Received**.